

KUKU PLUS

自動收折 換向手推車

Auto Fold Reversible Stroller



使用說明書

Instruction Manual

Jini 吉尼寶貝國際股份有限公司 JINI BABY INTERNATIONAL CO.,LTD.
No.27, Lane 290, Sec.2, Jia Dong Road, Changhua City 500-84, Taiwan
500-84 台灣彰化市茄苳路2段290巷27號 電話:04-7357958
統一編號:12617114 原產地:中國 Made in China

重要！請詳細閱讀並妥善保存作日後參考之用

**IMPORTANT - READ CAREFULLY AND KEEP
THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

關於推車

商品名稱：KUKU PLUS 自動收折換向手推車

產品型號：KU6048

適用年齡：0-48個月之嬰幼兒

最大年齡：48個月之嬰幼兒

最大體重：22公斤以下的嬰幼兒

主要材質：高碳鋼、塑膠、布料

展開尺寸：91x53x100 cm

收合尺寸：65x53x28 cm

產品重量：8.2KG

委製商/進口商資訊：

名稱：吉尼寶貝國際股份有限公司

地址：彰化市茄苳路二段290巷27號

電話：04-7357958

統編：126117114




功能特點

- **單鍵自動秒收** - 收車快速省力
- **可換向推把設計** - 隨時與寶寶面對面
- **輕量化車身** - 折疊後輕薄好收納
- **無段式椅背調節** - 輕鬆調整舒適角度
- **360° 萬向避震前輪** - 推行順暢更穩定
- **五點式安全帶設計** - 穩固守護寶寶安全
- **磁吸式安全扣** - 單手操作更便利
- **大容量置物籃** - 外出收納更輕鬆
- **可拆式前扶手** - 上下車更方便

零件清單



 
車架x1

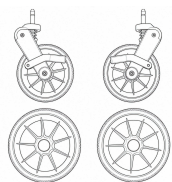

前輪x2 後輪x2




 前扶手x1



說明書x1

 部位說明

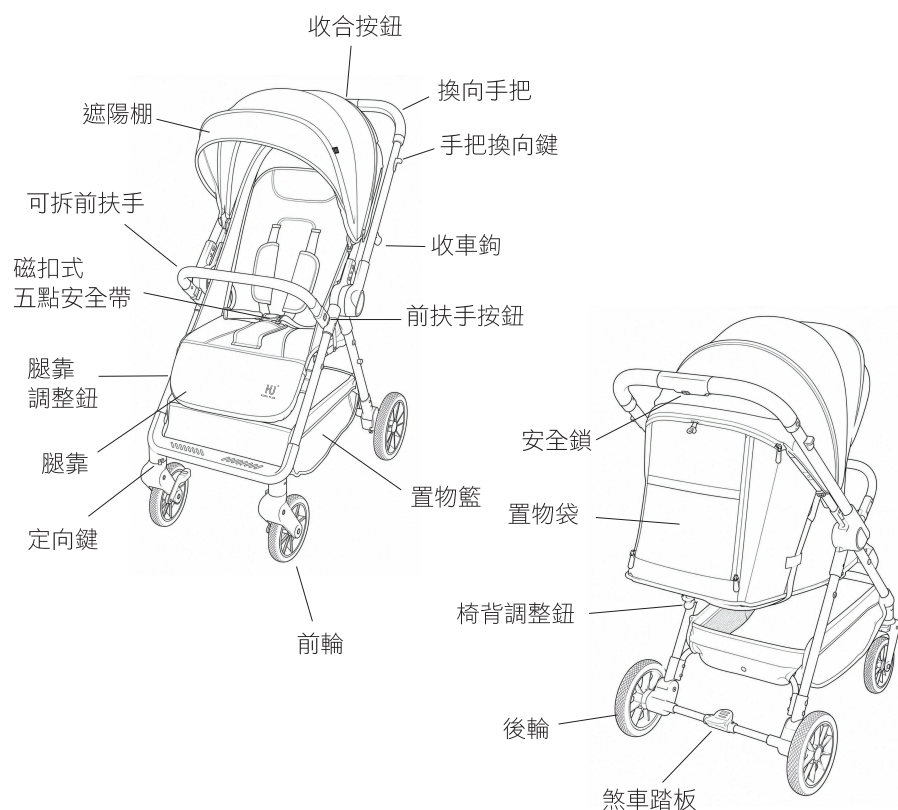

警告

 
 
本嬰兒推車適用於 0 個月至 4 歲以下嬰幼兒，體重不得超過 22 公斤。請勿將孩子單獨留在推車內，以免發生危險。

- 切勿留置嬰幼兒無人照顧。
- 使用前，確保所有鎖定裝置皆已正確啮合。
- 為避免傷害，確保展開與折疊本產品時與兒童保持距離。
- 不要讓兒童玩弄本產品。
- 務必隨時使用束縛系統。
- 避免因掉出或滑出而導致重傷，須隨時使用五點式安全帶將幼童固定。
- 本產品僅設計供步行使用，不適合跑步或滑冰。
- 為防止事故發生，確保手推車遠離自動閉合之門。
- 本產品最大承重為22公斤，只可載一名孩童，請勿超重。
- 本推車適合年齡為0-4歲，靠背和座椅之間的角度小於150° 時，不適用於0-6月的嬰兒使用。
- 請勿在推車把手上附掛任何物品，以防影響推車的穩定性。
- 僅限使用由製造商或經銷商所供應之替換零件，請勿隨便更換或使用非製造商認可之任何配件。
- 任意放置未經製造商核可之物品於車台上將造成危險。
- 放置與抱起嬰幼兒時，啮合駐車裝置。
- 本置物籃限載3公斤以下重量之物品。後方置物袋最大載重為0.5公斤。

組裝說明

1. 展開車架



打開收車鉤，向上拉起車架至聽到「喀噠」聲，確認已完全鎖定。

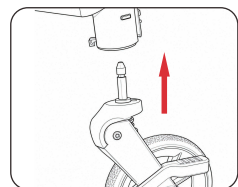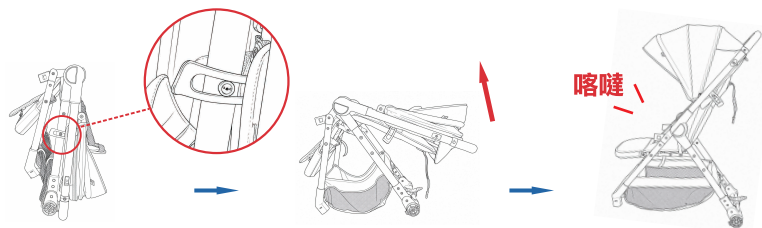

2. 安裝前輪

將前輪插入前輪管，並上推至聽到「喀噠」聲，確認前輪已完全固定。

 
 
拆卸：按下快拆按鈕後向下拉出前輪。

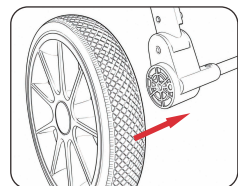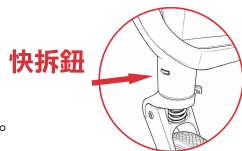

3. 安裝後輪


將後輪插入後輪管，向內推至聽到「喀噠」聲，確認後輪已完全固定。

  拆卸：按下快拆按鈕後拉出後輪。

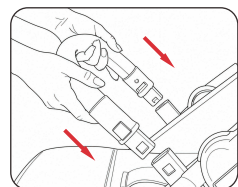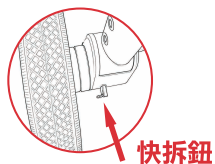

4. 安裝前扶手

 將前扶手兩端對準扶手插槽，向下壓入至聽到「喀噠」聲，確認前扶手已牢固安裝。

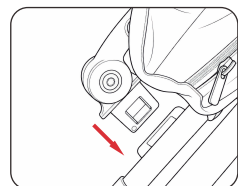


5. 安裝遮陽棚

將遮陽棚兩端插入兩側插槽，並確認已牢固安裝。

使用說明


展開推車

 1. 解開側邊收車鉤。
2. 向上拉起推車手把直到聽到「喀噠」聲。
3. 向上推起前扶手至定位
4. 確認各部件均已固定後，即可使用推車。

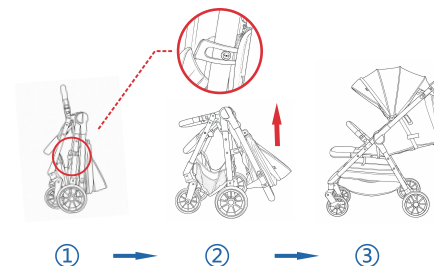


收合推車

 1. 收起遮陽棚。
2. 按下安全鎖，同時按壓收合按鈕。
3. 將手把向下壓，推車即可自動完成收合。
4. 確認收車鉤已扣住車架，以防推車意外展開。

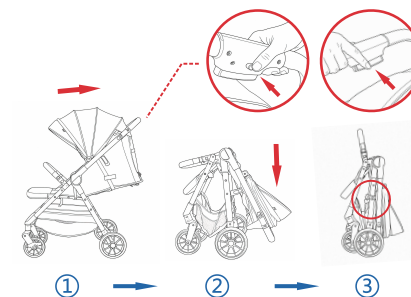


前輪定位與煞車

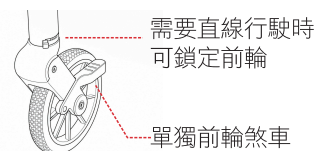 


使用煞車

 - 向下踩煞車踏板即可鎖定推車。
- 向上抬起煞車踏板即可解除煞車。

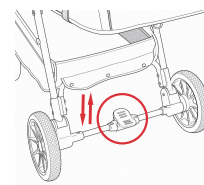

使用遮陽棚

 
- 向前拉可打開遮陽棚。
- 向後推可收合遮陽棚。
- 將中間拉鍊打開可延伸遮陽棚。

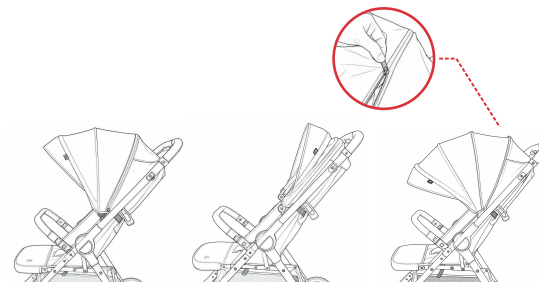

使用說明


使用前扶手

 - 將前扶手插入兩側孔位即可安裝。
- 同時按壓兩側按鈕即可拆卸扶手。

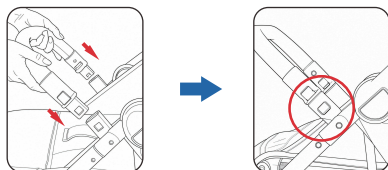


手把方向切換

 - 同時拉起手把兩側換向鍵。
- 將手把推至另一側即可切換方向。
- 操作前請先鎖定前輪。

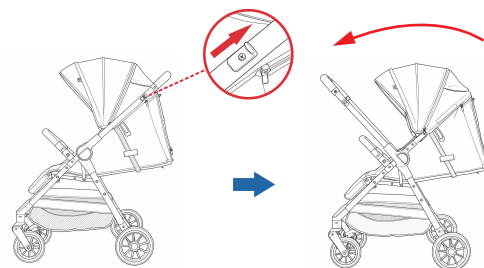

椅背透氣窗

 
拉開椅背兩側拉鍊，往上捲起外層布，並使用彈性帶固定住，使用透氣窗可保持空氣流通，並隨時觀看車內寶寶的狀況。

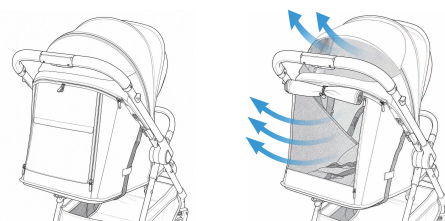

椅背調整

調高椅背：上拉調整帶上的拉環，調整至所需位置。

 
調低椅背：按下椅背調整鈕，調整至所需位置。

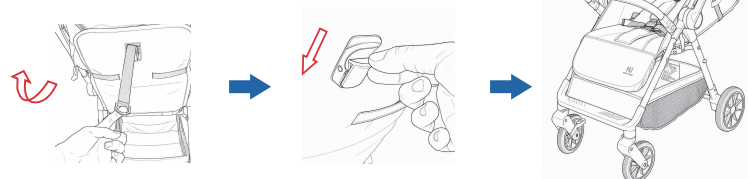

使用說明

安全帶使用方式

 1. 將肩帶扣件插入腰帶扣環。
2. 將中央扣件對齊重疊扣合。
3. 將跨帶磁吸扣連接到中央扣環。
4. 同時按下兩側按鈕即可解除安全帶。

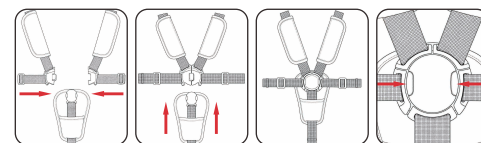

保養及維護

- 為了確保您的寶寶免受意外傷害，請經常對本產品進行檢查和保養。
- 定期檢查是否有螺絲鬆動、零件損壞或縫線斷裂痕跡，如有必要請更換破損的部件。
- 布套和配件，可以使用溫和的肥皂水清潔，並保持自然晾乾，不要直射陽光。
- 局部髒汙，可以用稀釋的清潔劑，以濕棉布或海綿清除汙漬，並在折疊或儲存前完全晾乾。
- 車架清理：髒汙時及時使用軟布擦拭乾淨，並用乾布擦乾。請勿使用刺激性化學品或漂白劑進行清潔。
- 請勿長時間曝曬在陽光下或接近強熱源，避免零件老化或布料褪色。
- 長時間不使用請將推車儲存在通風良好的地方避免發霉和生鏽。
- 剎車和車輪比其他部件容易磨損，必要請與本公司維修中心連絡。

■ 保固與售後服務

1. 本公司銷售之手推車出廠前經嚴格品管，在正確使用及保養下應能正確地表現其優越性能
2. 本產品自購買日期開始，享有一年內免費維修之售後服務(運費恕不在此列內)
3. 本保證卡如有遺失，恕不補發，敬請妥善保存
4. 本保證卡所提供之售後服務，不適用下列情況:
 - (1) 使用不當或不慎摔落、泡水、潮濕所造成之故障及損壞
 - (2) 自行拆裝所發生之破損或故障等，恕不列入保證範圍
5. 為保證顧客之權益，請務必填寫購買日期並加蓋經銷商之店章，否則本公司將以本產品之製造日作為保證期之起算日; 線上購買將以下單當日為起算日
6. 未經本公司經銷商蓋章，或塗改購買日期者，一律視為無效

 
售後服務保證卡

商品貨號：

購買日期：

購買店家：

店家地址：

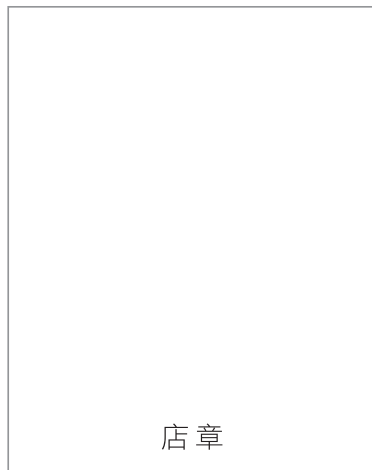

店章

ABOUT

KUKU PLUS Auto Fold Reversible Stroller

Item No.: KU6048

Applicable Age: 0 - 48 months

Maximum Weight: 22 kg

Material: High-carbon Steel, Plastic, Fabric

Unfolded Size: 91x53x100 cm

Folded Size: 65x53x28 cm

Net Weight: 8.2 kg

Jini Baby International Co., Ltd.

No.27, Lane 290, Sec. 2, Jia Dong Road

Chang Hua City 500, Taiwan

TEL: 04-7357958



 
FEATURES

- One-Touch Auto Fold
- Reversible Handle
- Lightweight & Compact Design
- Infinite Recline Backrest
- 360° Swivel Front Wheels with Suspension
- 5-Point Safety Harness
- Magnetic Safety Buckle
- Large Storage Basket
- Removable Bumper Bar

PARTS LIST




Frame x1

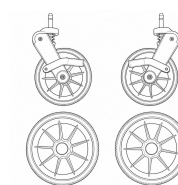

Front Wheel x2
Rear Wheel x2




Bumper x1

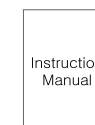

Instruction Manual x1

PARTS NAME

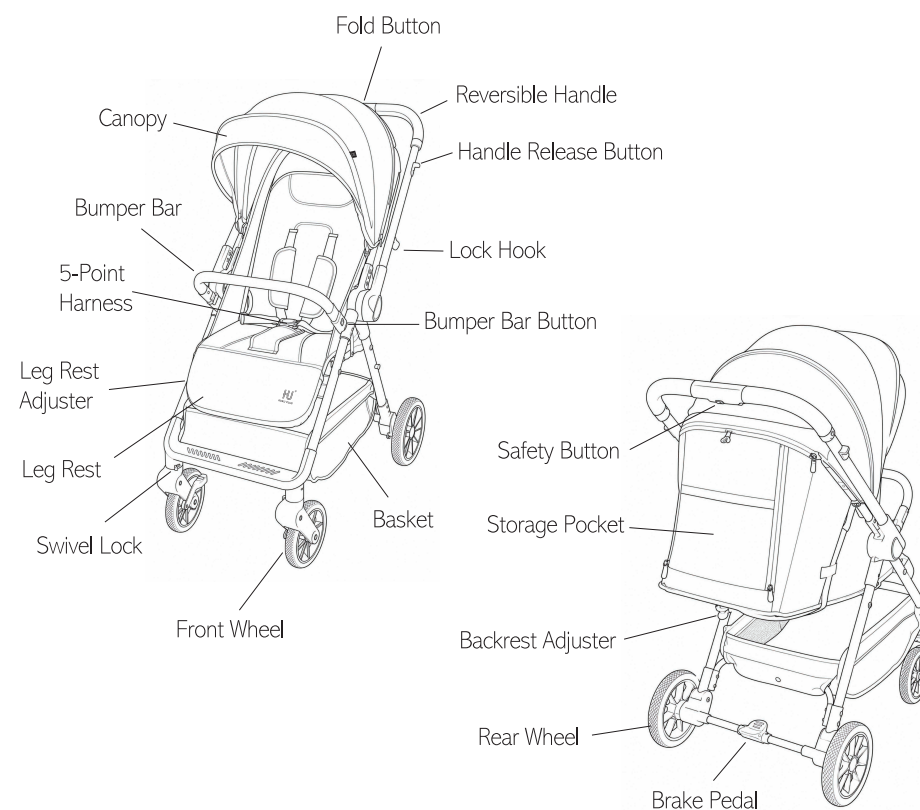


WARNINGS

This baby stroller is intended for children from 0 month old and up to 4 years of age and within 22kg weight. It may be dangerous to leave your child unattended.


- Never leave the child unattended.
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that the child is kept away when unfolding and folding this product.
- Do not let the child play with this product.
- Always use the restraint system.
- Avoid serious injury from falling or sliding out. Always use seat belt.
- This product is designed for walking use only, not suitable for running or skating.
- To prevent accidents, keep the stroller away from the door that closes automatically.
- The maximum load for the baby stroller is 22kg and overload forbidden. This baby stroller is designed for one child.
- The baby stroller is suitable for baby 0-4 years and is not suitable for infants aged 0-6 months when the angle between the backrest and seat is less than 150°.
- Any load attached to the handle affects the stability of the stroller.
- Only replacement parts supplied by the manufacturer/distributor shall be used. Any accessories which are not approved shall not be used.
- Do not place any items on the stroller that are not approved by the manufacturer, as this may cause danger.
- Make sure the baby stroller is braked when placing and removing the children.
- Maximum load of storage basket: 3 kg. Maximum load of rear pocket: 0.5 kg.

ASSEMBLY

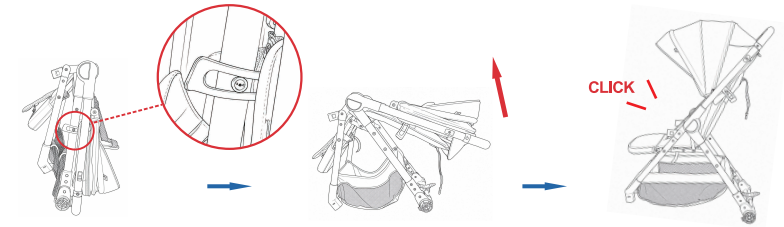

1. Unfold the Frame


Release the lock hook and unfold the stroller until it clicks into place. Ensure the frame is fully locked in place.

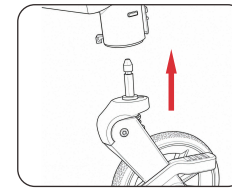

2. Install the Front Wheel

Insert the front wheels and push upward until locked.


Removal: Press the quick-release button and pull the wheel downward.

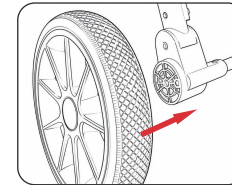

3. Install the Rear Wheels


Insert the rear wheels and push inward until locked.

Removal: Press the quick-release button and pull the wheel out.

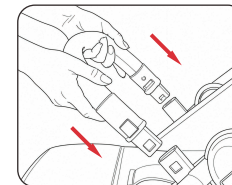

4. Install the Bumper Bar

Align both ends of the bumper bar with the mounting slots and press down until locked.

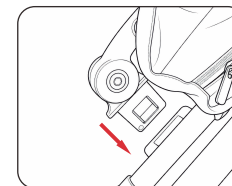


5. Install the Canopy

Insert both ends of the canopy into the slots on each side and ensure they click securely into place.

HOW TO USE


Unfolding the Stroller

1. Release the lock hook on the side of the stroller.
2. Pull up the handle until a "click" is heard, ensuring the frame is fully locked.
3. Lift the bumper bar to its operating position.
4. Ensure all parts are securely locked before use.


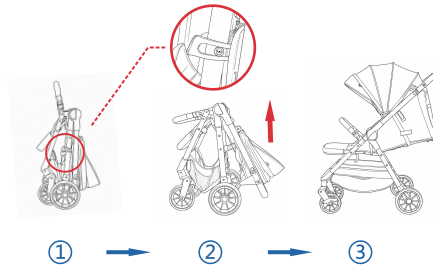


Folding the Stroller

1. Fold the canopy.
2. Press the safety button and squeeze the folding button.
3. Push the handle downward to automatically fold the stroller.
4. Ensure the lock hook is engaged to prevent accidental unfolding.

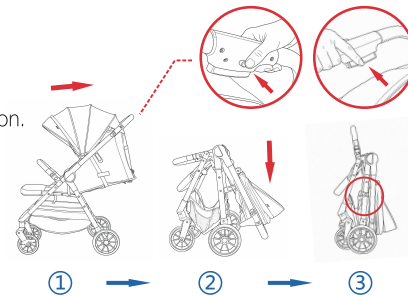

Front Wheel Swivel Lock

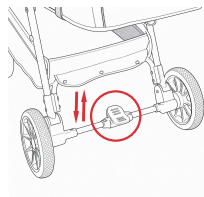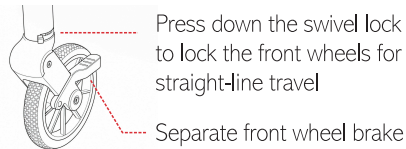


Use Brake

1. Press the brake pedal downward to lock the rear wheels.
2. Lift the brake pedal upward to release the brake.

HOW TO USE


Use Bumper Bar

- Insert the bumper bar into the mounting slots on both sides.
- Press both release buttons simultaneously to remove the bumper bar.

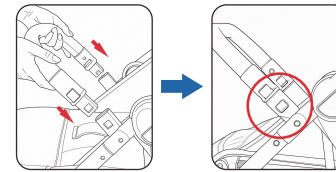


Handle Direction Adjustment

- Pull up the handle release buttons on both sides simultaneously.
- Move the handle to the opposite side to change the direction.
- Lock the front wheels before changing the handle direction.

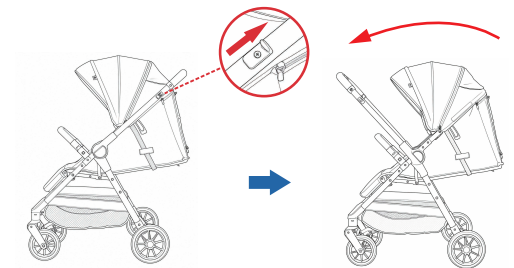


Back Window

Unzip both sides of the backrest cover and roll up the fabric. Secure it with the elastic straps to improve ventilation and easily monitor your baby.

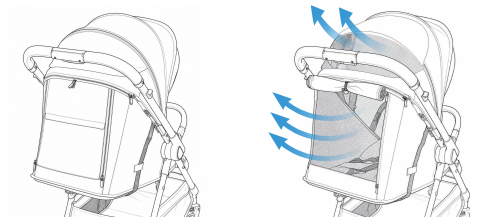


Use Canopy

- Pull the canopy forward to open.
- Push the canopy backward to fold.
- Open the zipper to extend the canopy.

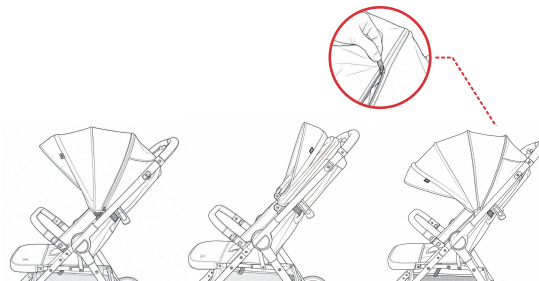

Backrest Adjustment


- Pull the adjustment strap upward to raise the backrest to the desired position.
- Press the backrest adjuster and lower the backrest to the desired position.

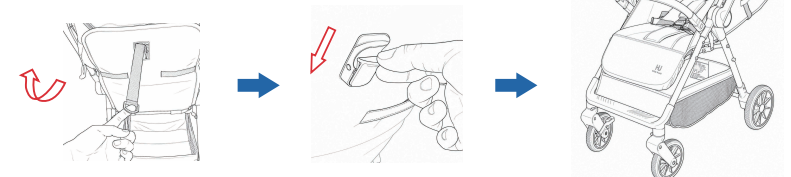

■ HOW TO USE ■

Use 5-Point Harness

- 1.Insert the shoulder strap buckles into the waist belt buckle.
- 2.Align and connect the center buckle pieces.
- 3.Attach the crotch strap magnetic buckle to the center buckle.
- 4.Press both side buttons simultaneously to release the harness.

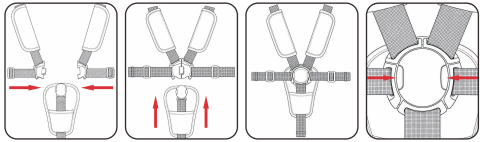

■ CARE AND MAINTENANCE ■

- It is necessary to check and maintenance often to avoid your baby from any injury by accident.
- Check regularly if there are loosen screws, damaged parts or crack in cloth replace them as necessary.
- Wipe the fabric with mild soap and cold water and let it air dry.
- For especially dirty parts, please diluted detergent and clean it with damp cotton cloth or sponge.
- Wipe the metal and plastic parts of the stroller with a wet cloth then wipe it dry after that. Do not use harsh chemicals or bleach for cleaning.
- Do not let your stroller in direct sunlight or near strong heat sources for a long time. Otherwise, the plastic and fabric parts will fade.
- Leave the stroller in well-ventilated room to prevent the fabric from getting moldy and the frame from rusting.
- The brakes and wheels wear out faster than other parts. Replace them when necessary.